


Earth distributors

- The earth distributor is used to connect all the earths in an installation.

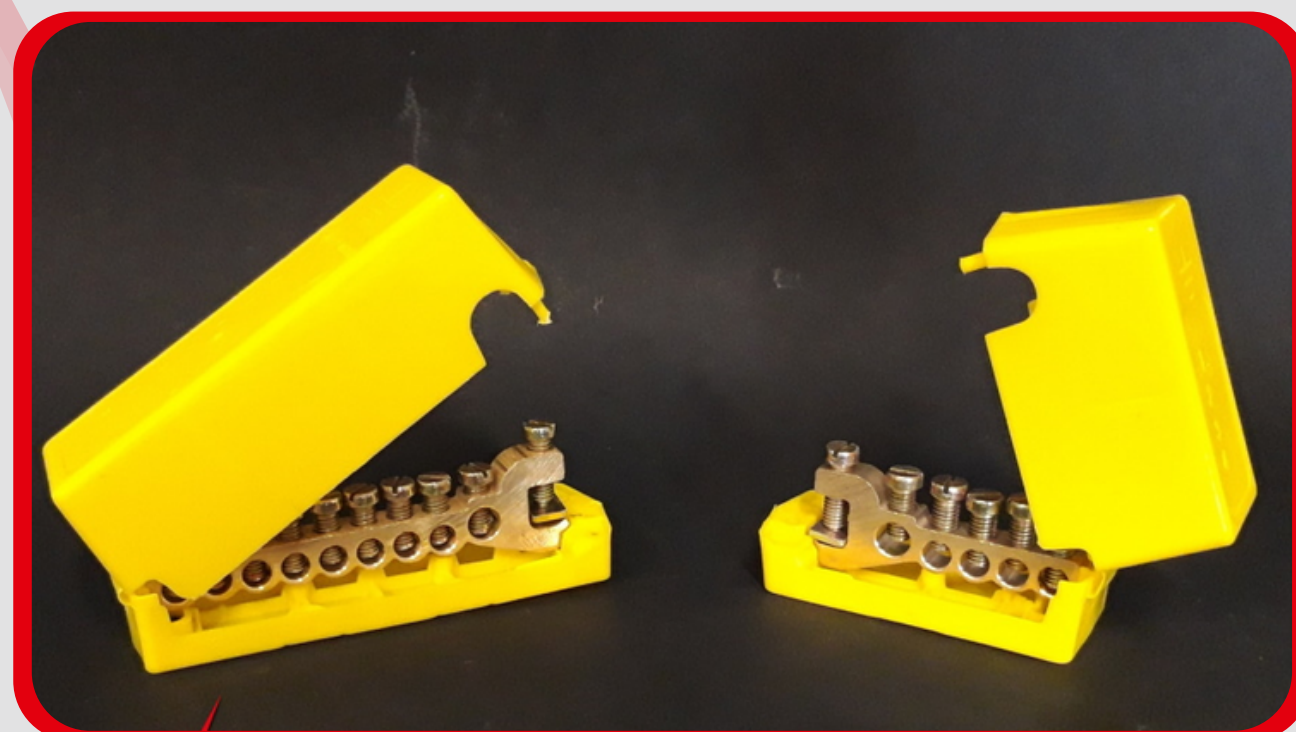

Reference	Dimensions LxlxH (mm)	Number of connection	Weight (G)	Packaging
RT5	78x35x46	1 inlet cable 35mm ² , 4 outlets 25mm ²	72	1
RT8	115x35x46	1 incoming cable 35mm ² , 8 outgoing cables 25mm ²	110	1

* Other configurations possible on request