



# How to fit heat-shrink tubing ?

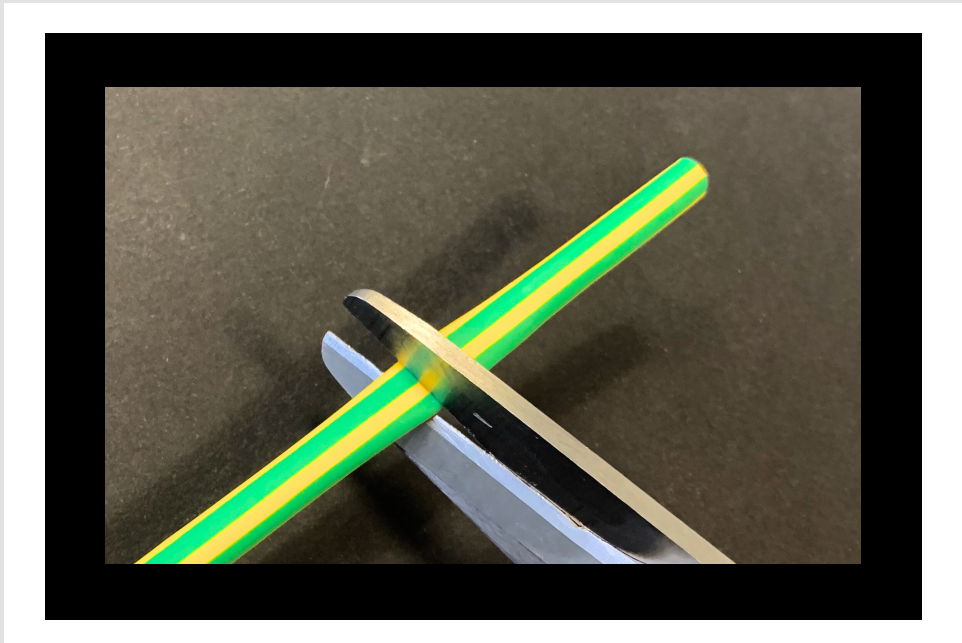

- Start by cutting the liner to the correct length for the surface to be protected, taking into account the longitudinal shrinkage of around 5%.

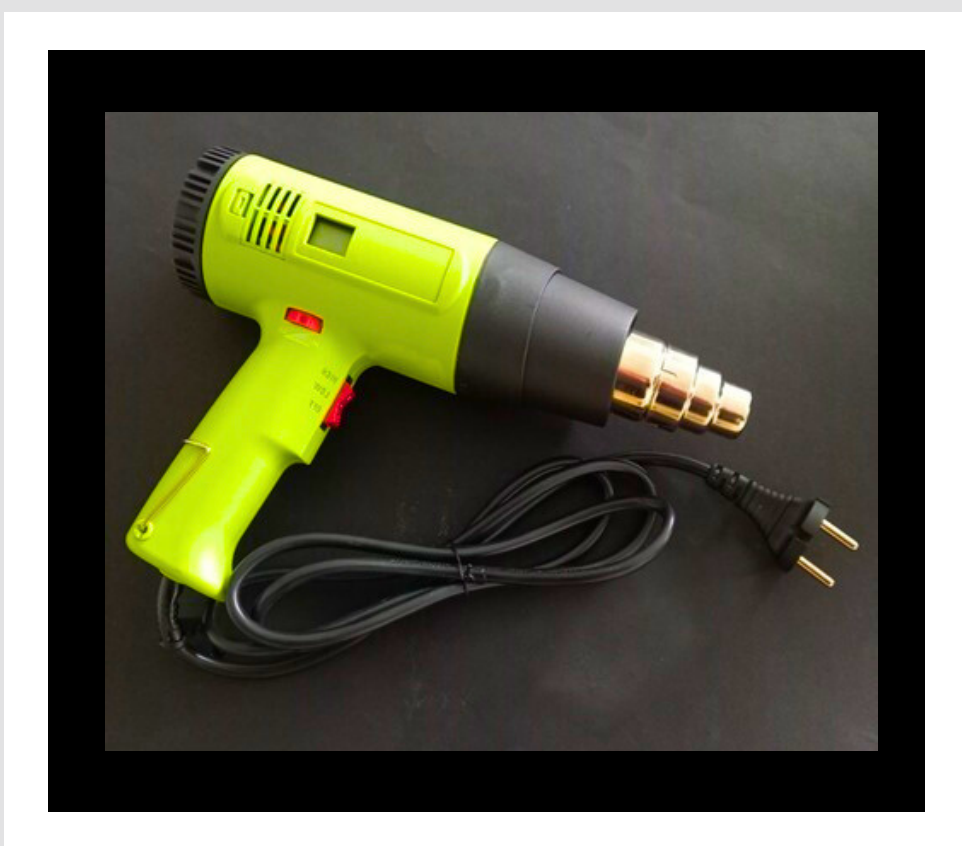

- Depending on the liner used, make sure you set your hot air gun to the right temperature.

See table at bottom of page.



- Finally, heat evenly on the outside diameter and then along length of the sheath.



At what temperature do the different walls shrink?

- Thin wall	+100 C° / 215 F°
- Medium wall	+120 C° / 250 F°
- Thick Wall	+120 C° / 250 F°

